
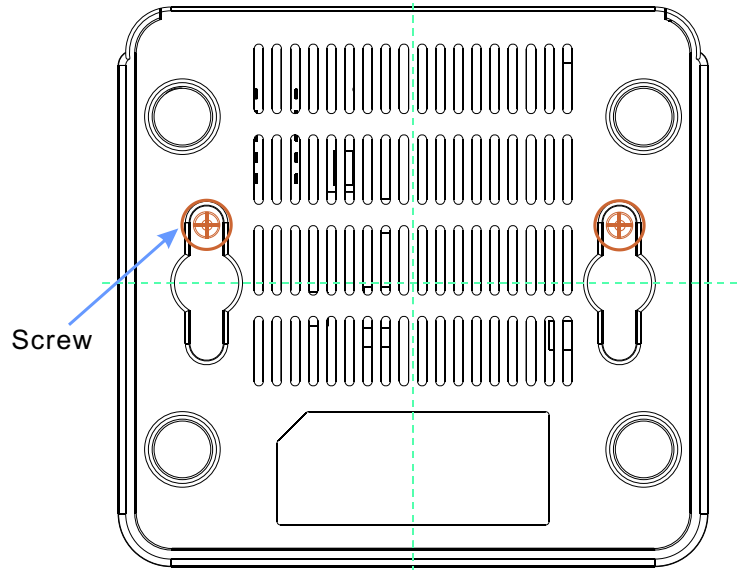



SBWD100A Wall Mounting

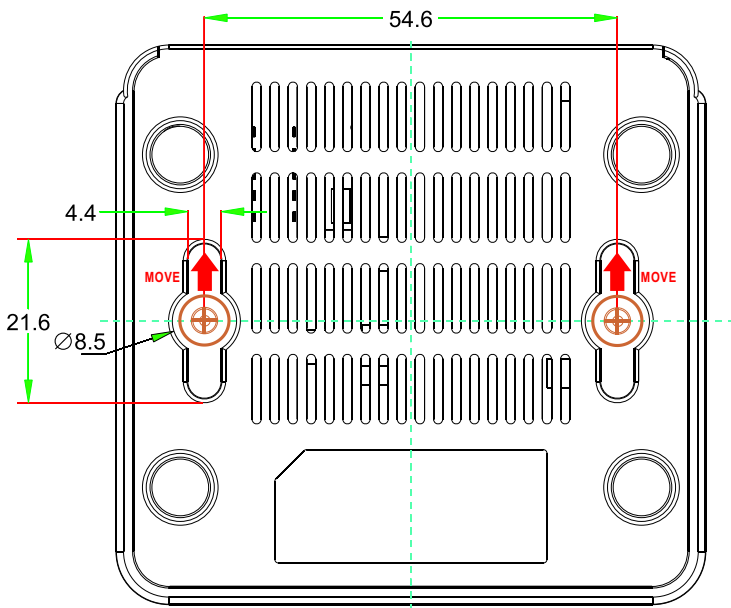

1. Place the template on the wall in the position the device will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors. A 3/16" drill bit is recommended for plastic anchors.
3. Leave screws extended about 0.2 inches from the wall.
4. Locate the device keyhole openings over the screw heads and mount the device onto the screws.

Illustrations Not to Scale

Fasteners

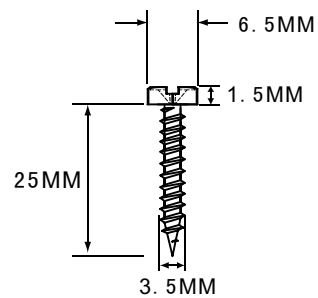

(2) #8 Slotted/Phillip Hex Washer Screws



(2) Plastic Screw Anchors

